



Roller Shade Measuring Instructions

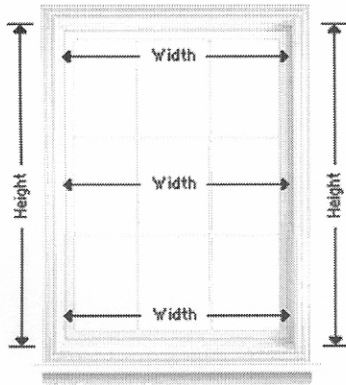

Measure for: inside mount roller shades

1. Measure width of window opening at the top, middle, and bottom and use the narrowest dimension for ordering. The factory will automatically take an allowance of 1/2" for operating clearance unless you specify otherwise.


2. To install the product flush with the window frame, a minimum window depth of 2" is required without a valance and a minimum window depth of 4" is required with a valance.

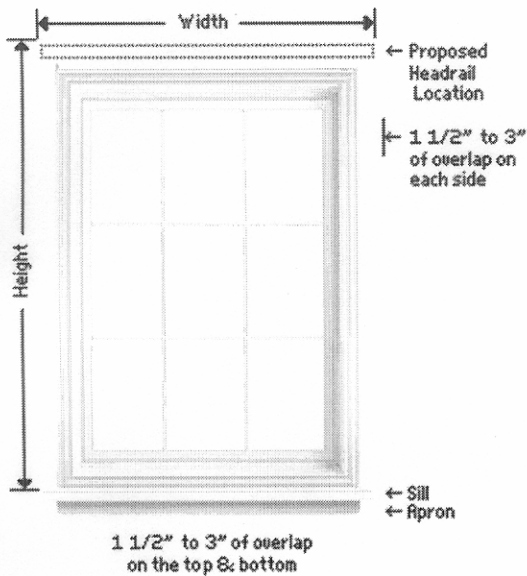

Measure for: outside mount roller shades

1. Measure the exact width of the area to be covered. It is recommended that 3" be added to the shade width for the standard overlap of 1 1/2" on each side.

2. Measure the height of the area to be covered. Measure from the ceiling or desired point above the window to approximately 1 1/2" below the window frame.

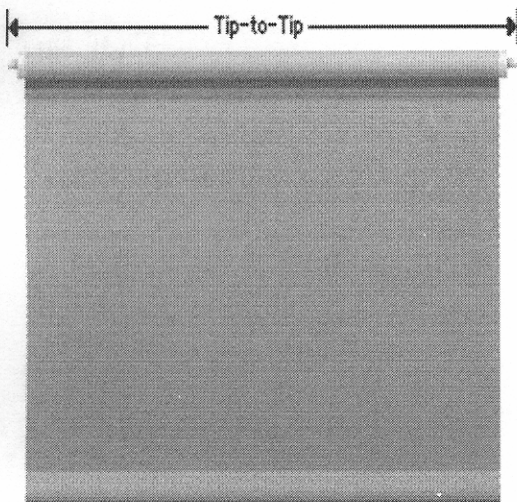

Tip-to-Tip:

Tip-to-Tip Measure is the common measure type for most roller shades. Choosing this measure type will include the headrail "pegs" that mount the shade to the wall or frame.